



# SAFETY SUPPLEMENT

## ATTENTION INSTALLERS/OPERATORS FOR YOUR PROTECTION:

1. Read and understand the Component Manufacturer's Operating Manual accompanying this equipment before performing any work.
2. Additional safety label kits available from Meyer upon request at no charge. Affix these labels in locations to achieve maximum visibility and thereby alert any personnel that may be on-site that a potential for injury could occur.
3. Under no circumstances should this equipment be installed or operated in a manner that permits access to the interior of the blower, including any inlet/outlet piping.
4. Inlet and Outlet piping must always be permanently fastened to mating system components.
5. All guarding, including but not limited to, belt and coupling guards, must be installed before start up and remain in place during operation.
6. **Always follow LOCKOUT-TAGOUT procedure** before performing any work.
7. Consult your plant safety director, system designer, installation manager or the Meyer factory if you have any questions regarding the proper installation, operation and maintenance of this equipment.

Wm. W. Meyer & Sons, Inc.

1700 Franklin Blvd. • Libertyville, IL 60048 • Phones: 800-963-4458, 847-918-0111

[meyerindustrial.com](http://meyerindustrial.com)

# BLOWER PACKAGE SAFETY PRECAUTIONS

 **DANGER** Failure to observe these notices will result in serious injury or death.

- Do not use the discharge air from this unit for breathing. It is not suitable for human consumption.
- Lockout/Tagout power before working on any controls. Electrical shock can be fatal.
- Blower is not to be used where non-sparking equipment is specified.

 **WARNING** Failure to observe these notices could result in serious injury or death.

- Lockout/Tagout power before performing servicing. Machine may start automatically. Equipment in idle mode does not mean it is offline.
- Do not operate without belt/coupling guards in place. Replace/install guards prior to start up.
- Do not loosen or remove the oil fill plug, drain plugs, or covers, etc. in the oil system until the unit is shut down and the power is locked and tagged out.
- Do not operate with open inlet or outlet port. Be sure that inlet and outlet port piping is properly installed prior to operation.
- Blower and blower discharge piping may be extremely hot and could cause skin burns on contact.

**NOTICE** Failure to observe these notices could result in damage to the equipment.

- Do not exceed specified vacuum or pressure limitations.
- Do not operate above or below recommended blower speed range.
- Do not restrict inlet port on pressure application or discharge port on vacuum application.

## SAFETY LABELS

Locate all of the safety labels on your equipment and know their meaning before operating your Blower Package.

	<b>! WARNING</b>
	<p><b>Never operate with guard removed.</b> Moving parts can crush and cut. <b>Lockout/tagout power</b> before servicing.</p> <p>430Z-229</p>

	<b>! WARNING</b>
	<p><b>Hot surface.</b> <b>Do NOT touch.</b></p> <p>420Z-233</p>

	<b>! WARNING</b>
	<p><b>Automated machinery.</b> This unit may start at any time. <b>STAY CLEAR.</b> <b>Lockout/tagout power</b> before servicing.</p> <p>430Z-230</p>

	<b>! WARNING</b>	
	<p><b>Loud noise hazard.</b> Hearing protection must be worn.</p> <p>430Z-233</p>	

	<b>! WARNING</b>
	<p><b>Equipment may be under pressure.</b> <b>Lockout/tagout power</b> and relieve pressure before servicing.</p> <p>430Z-231</p>

	<b>! WARNING</b>
	<p><b>Strong suction.</b> Stay clear of inlet when operating. Clothing, hair, body parts, and other objects may be pulled into inlet.</p> <p>430Z-232</p>

	<b>! WARNING</b>	
	<p>To reduce the risk of serious injury or death: Equipment must be operated, serviced and maintained by trained personnel. Read and understand all instructions before operating, maintaining or servicing this machine.</p> <p><b>Scan code for instruction manual</b></p> <p>430Z-243</p>	

NOTE: Contact Wm. W. Meyer & Sons, Inc. at 800-963-4458 for free replacement safety label kit.

# SAFETY SUPPLEMENT

**Wm. W. Meyer & Sons, Inc.**

1700 Franklin Blvd.

Libertyville, IL 60048

**800-963-4458**

[www.meyerindustrial.com](http://www.meyerindustrial.com)